


Snow/Mud Flaps for the Snowrator Part No. SNR24019

Installation Instructions

- Park the machine on a level surface, and move the motion-control levers to the NEUTRAL position.
- 2. Disconnect the kill cord from the operator presence sensor to shut off the engine, wait for all moving parts to stop, and remove the key.
- 3. Chock the front tires.
- 4. Secure the flap to the machine using 3 bolts, a retainer plate, and 3 nuts (Figure 1).

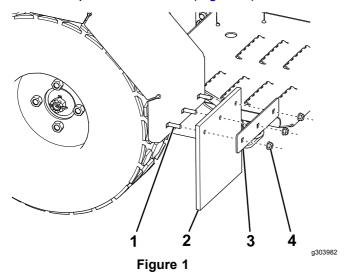

1. Bolt

3. Retainer plate

2. Flap

- 4. Nut
- 5. Repeat step 4 on the other side of the machine.