

6in Blade Extension Kit for ATV/UTV Straight-Blade Plows

Part No. MSC13850B—Serial No. 400000000 and Up

Installation Instructions

A WARNING

CALIFORNIA
Proposition 65 Warning
This product contains a chemical
or chemicals known to the State of
California to cause cancer, birth defects,
or reproductive harm.

BOSS Products limited consumer warranty and BOSS Products commercial warranty policies are located at www.bossplow.com.


Safety

Installing this kit will change the weight of your plow. Ensure that your vehicle does not exceed the gross-vehicle-weight rating (GVWR) at any time. You may need to weigh the vehicle and add ballast or limit the payload of the vehicle to compensate.

Installation

- If the plow is mounted to a vehicle, park the machine on a level surface, shut off the engine, wait for all moving parts to stop, engage the parking brake, and remove the key.
- 2. Remove and retain the plow blade guides.
- 3. On each side of the plow blade, position the rib plates as shown in Figure 1.

Important: Ensure that the bottom rib plate is 9.5 mm (3/8 inch) from the bottom of the plow rib.

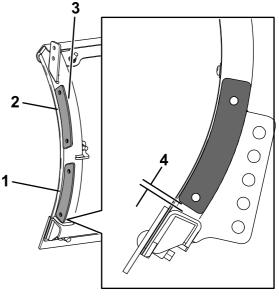

g236025

Figure 1

- 1. Rib plate—bottom
- 2. Rib plate—top
- 3. Plow rib
- 4. 9.5 mm (3/8 inch) gap
- 4. Clamp the rib plates in place and mark the hole positions on the plow rib.
- 5. Remove the rib plates and drill holes (7/16 inch) at each of the marks.
- 6. Secure each blade extension and rib plate to the plow rib using 4 carriage bolts, 4 flat washers, and 4 locknuts (3/8 inch) as shown in Figure 2.

Note: Torque the bolts to 31 N·m (23 ft-lb).



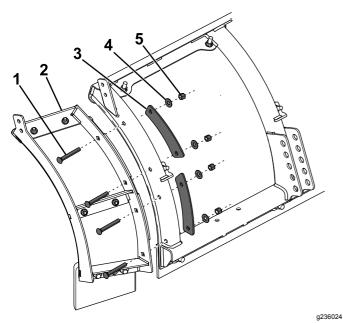


Figure 2

- 1. Carriage bolt
- 2. Blade extension
- 3. Rib plate
- 4. Flat washer
- 5. Locknut

7. Install the previously removed plow blade guides using the existing top bolt and nut, and a new bolt (5/16 inch) and locknut (Figure 3).

Note: Torque the bolts to 19 N·m (14 ft-lb).

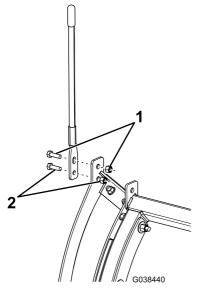


Figure 3

1. Existing hardware

2. New bolt (5/16 inch) and locknut (5/16 inch)

g038440