

Urethane Edge Kit V-XT Plow

Part No. MSC18237—Serial No. 400000000 and Up Part No. MSC18238—Serial No. 400000000 and Up Part No. MSC18239—Serial No. 400000000 and Up Part No. MSC29090-Serial No. 400000000 and Up

Installation Instructions

BOSS Products limited consumer warranty and BOSS Products commercial warranty policies are located at www.BOSSPlow.com.

Patent www.ttcopats.com.

Installation

- 1. Park the machine on a level surface and raise the plow a few centimeters (inches) off the ground.
- 2. Place a jack stand under the plow pushframe, shut off the vehicle engine, engage the parking brake, and remove the key.
- Remove the existing cutting edges by removing 3. the bolts, washers, and nuts that secure the cutting edges to the blades (Figure 1).

Retain the washers and nuts for future steel cutting edge installation.



Figure 1 2.29 m (7-1/2 ft) or 2.5 m (8-1/6 ft) plow shown

- 1. Bolt (5/8 x 2 inches)
- 2. Cutting edge
- 3. Washer

- 4. Nut

- Safety
- Always lower the blade when the machine is not in use.
- Never put any part of your body between the plow and the machine.
- 4. Secure the urethane cutting edges and straps to the blades using the carriage bolts, washers, and locknuts that are provided in the kit (Figure 2). Loosely tighten the hardware by hand.



Figure 2

2.29 m (7-1/2 ft) or 2.5 m (8-1/6 ft) plow shown

- Carriage bolt (5/8 x 4 4. Washer 1 inches)
 - 5. Locknut (5/8 inch)
- Urethane cutting edge 3

2.

Strap

Ensure that there is a gap (3.2 mm or 1/8 inch) 5. between the edges at the center of the plow (Figure 3).



Register at www.bossplow.com. CER



- 1. 3.2 mm (1/8 inch)
- 6. Tighten the bolts until the strap is securely fastened in place.



Urethane Edge Kit V-XT Plow

Part No. MSC18237—Serial No. 400000000 and Up Part No. MSC18238—Serial No. 400000000 and Up Part No. MSC18239—Serial No. 400000000 and Up

Installation Instructions

BOSS Products limited consumer warranty and BOSS Products commercial warranty policies are located at www.BOSSPlow.com.

Patent www.ttcopats.com.

Safety

- Always lower the blade when the machine is not in use.
- Never put any part of your body between the plow and the machine.

Installation

- 1. Park the machine on a level surface and raise the plow a few centimeters (inches) off the ground.
- 2. Place a jack stand under the plow pushframe, shut off the vehicle engine, engage the parking brake, and remove the key.
- Remove the existing cutting edges by removing 3. the bolts, washers, and nuts that secure the cutting edges to the blades (Figure 1).

Retain the washers and nuts for future steel cutting edge installation.



- Figure 1 2.29 m (7-1/2 ft) or 2.5 m (8-1/6 ft) plow shown
- 1. Bolt (5/8 x 2 inches)
- 2. Cutting edge
- 3. Washer

- 4. Nut

4. Secure the urethane cutting edges and straps to the blades using the carriage bolts, washers, and locknuts that are provided in the kit (Figure 2). Loosely tighten the hardware by hand.



2.29 m (7-1/2 ft) or 2.5 m (8-1/6 ft) plow shown

- Carriage bolt (5/8 x 4 4. Washer inches)
 - 5. Locknut (5/8 inch)
- 2. Strap

1.

- 3. Urethane cutting edge
- Ensure that there is a gap (3.2 mm or 1/8 inch) 5. between the edges at the center of the plow (Figure 3).

Register at www.bossplow.com. CER





- 1. 3.2 mm (1/8 inch)
- 6. Tighten the bolts until the strap is securely fastened in place.





Urethane Edge Kit

V-XT Plow

Part No. MSC18237—Serial No. 400000000 and Up Part No. MSC18238—Serial No. 400000000 and Up Part No. MSC18239—Serial No. 400000000 and Up

Installation Instructions

This is a revision ext will be edited AFTER routing To see the changes once implemented, click the

Post-Dratting Review checkbox in your task.

The Reason for creating the Revis:



California to cause cancer, birth defects, or reproductive harm.

Use of this product may cause exposure to chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Installation

- 1. Park the machine on a level surface and raise the plow a few centimeters (inches) off the ground.
- Place a jack stand under the plow pushframe, 2. shut off the vehicle engine, engage the parking brake, and remove the key.
- Remove the existing cutting edges by removing 3. the bolts, washers, and nuts that secure the cutting edges to the blades (Figure 1),

Retain the washers and nuts for future steel cutting edge installation

2 3 a235400

Figure 1 2.29 m (7-1/2 ft) or 2.5 m (8-1/6 ft) plow shown

- 1. Bolt (5/8 x 2 inches) 3. Washer
- 2. Cutting edge 4. Nut

BOSS Products limited consumer warranty and BOSS Products commercial warranty policies are located at www.BOSSPlow.com.

Safety

- Always lower the blade when the machine is not in use.
- Never put any part of your body between the plow and the machine.



 Secure the urethane cutting edges and straps to the blades using the carriage bolts, washers, and locknuts that are provided in the kit (Figure 2). Loosely tighten the hardware by hand.



2.29 m (7-1/2 ft) or 2.5 m (8-1/6 ft) plow shown

- 1. Carriage bolt (5/8 x 4 inches)
 - 5. Locknut (5/8 inch)

4. Washer

3. Urethane cutting edge

Strap

2.

5. Ensure that there is a gap (3.2 mm or 1/8 inch) between the edges at the center of the plow (Figure 3).





- 1. 3.2 mm (1/8 inch)
- 6. Tighten the bolts until the strap is securely fastened in place.