

A Division of Northern Star Industries, Inc.

P.O. Box 787 Iron Mountain, MI 49801-0787 ISO 9001:2008 REGISTERED bossplow.com

ROM TRUCK

HEADLIGHT WIRING

MSC06428 Headlight Adapter

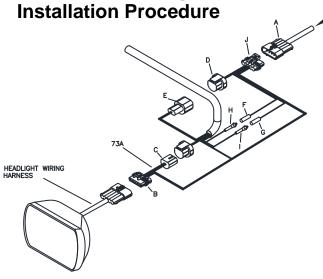


Figure 1. Driver Side Connections

G10821

- Disconnect OEM Headlight Connector Plug

 (A) from headlight wire harness.
- 2. Insert Five Pin Connector (B) of Headlight Adapter (73A) into headlight wire harness.
- Connect Black Rubber Female Socket (C) of Headlight Adapter (73A) into driver side of plow wiring harness.
- Connect the Blue Sealed Beam Connector (D) of Headlight Adapter (73A) into Black Rubber Female Socket (E) on driver side plow wiring harness.
- 5. Connect Opposite End (J) of Headlight Adapter (73A) into OEM Wiring Harness (A).
- Connect Female Bullet (F) Yellow Wire from headlight adapter (73A) to Male Bullet (H) Yellow Wire on driver side plow wiring harness.
- Connect Female Bullet (G) Violet Wire from Headlight Adapter (73A) to Male Bullet (I) Violet Wire on driver side plow wiring harness.



side.

9 Connect Female Bullet (G) Pink Wire fro

8. Repeat steps 1 through 5 on passenger

 Connect Female Bullet (G) Pink Wire from Headlight Adapter (73A) to Male Bullet (I) Pink Wire on passenger side plow wiring harness.

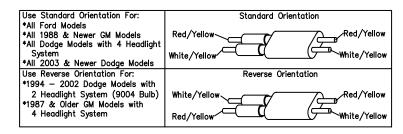


Figure 3. Vehicle Option Connector

G10202

FROM TRUCK

 Locate vehicle option connector. Align the connector so that the wire colors are positioned in the standard orientation. This is illustrated in Figure 3.

G102

13-Pin Headlight Adapter MSC06428

