

## Installation Instructions

BOSS Products limited consumer warranty and BOSS Products commercial warranty policies are located at [www.BOSSPlow.com](http://www.BOSSPlow.com).


Patent [www.ttcopats.com](http://www.ttcopats.com).

# Safety

## Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.

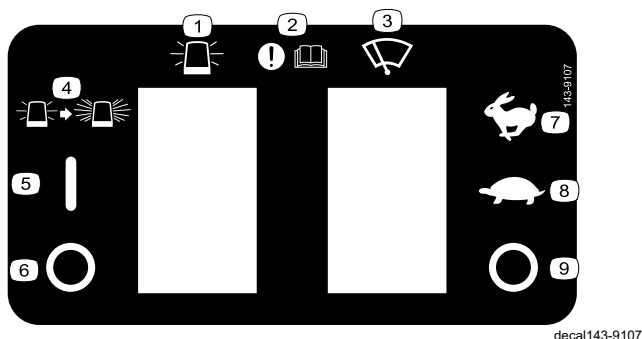

143-9107

decal143-9107

- |  |         |
|--|---------|
| 1. Strobe light                                  | 6. Off  |
| 2. Attention—read the <i>Operator's Manual</i> . | 7. Fast |
| 3. Windshield wiper                              | 8. Slow |
| 4. Change strobe pattern (hold for 1/2 second)   | 9. Off  |
| 5. On  |         |

# Installation

## Preparing the Machine


1. Park the machine on a level surface.
2. Lower the attachment.
3. Move the motion-control levers to the NEUTRAL position.
4. Wait for all moving parts to stop.
5. Engage the parking brake.
6. Remove the key.
7. Allow machine components to cool.

## Installing the Power Kit

Determine the left and right sides of the vehicle from the normal operating position.


1. Remove the tabs from the front and left side of the enclosure and install 4 rubber grommets.



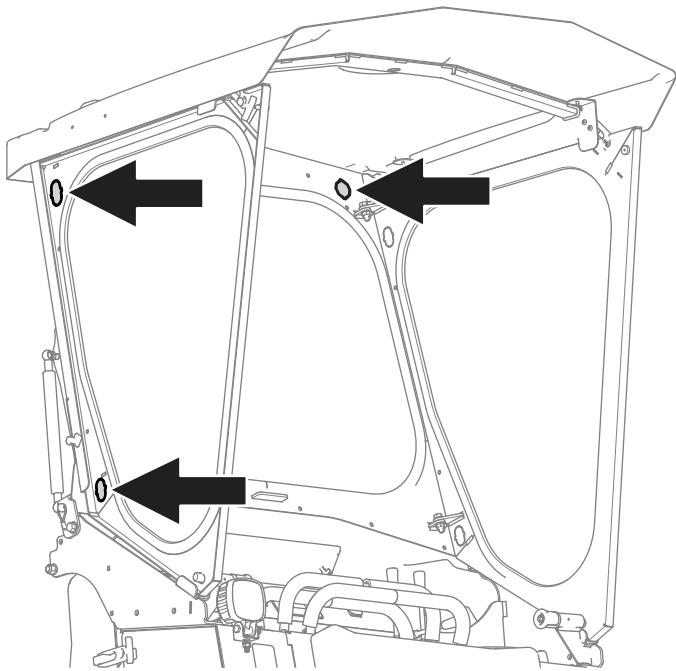

**Figure 1**


g558655

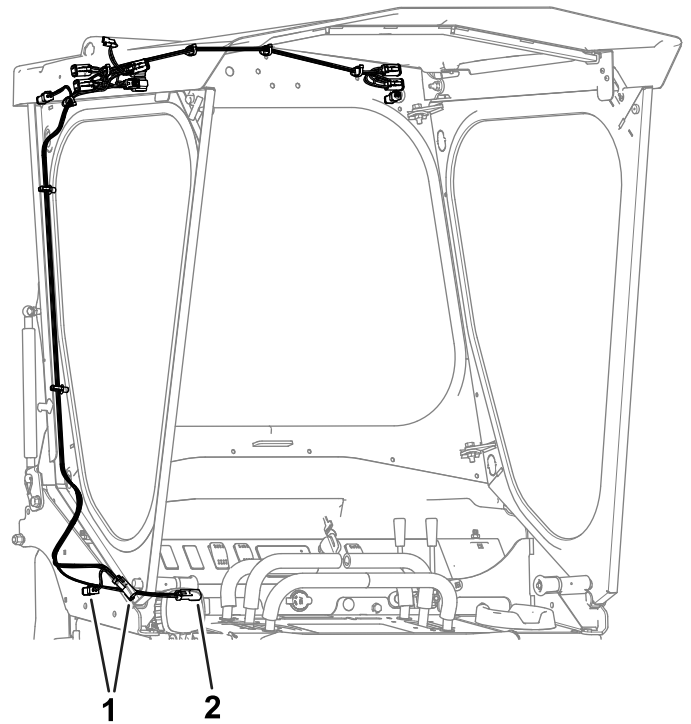

**Figure 3**

g558797

2. Route the kit wire harness through the cab.
  - A. Install the wire harness at the top of the enclosure.

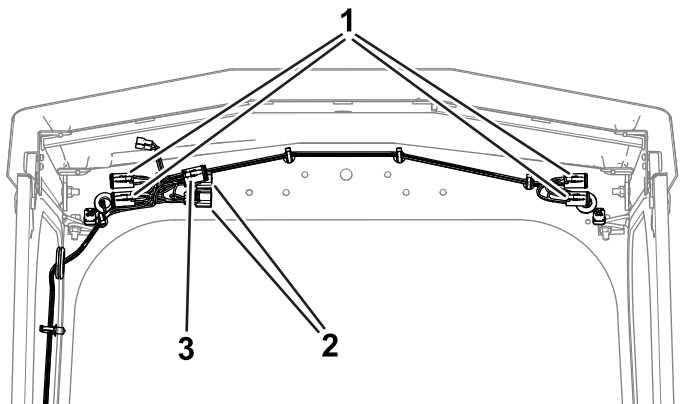

**Figure 2**

g558798


1. Work light connectors
2. Switch connectors
3. Wiper motor connector

- B. Route the wire harness along the outer left side of the enclosure and secure the harness using 2 zip ties.

**Note:** Fold the left panel for better access.

1. Work light connectors
2. Strobe/whip light kit connector

3. Install the switch bracket using 2 bolts (5/16 x 1 inch) and 2 clip nuts.

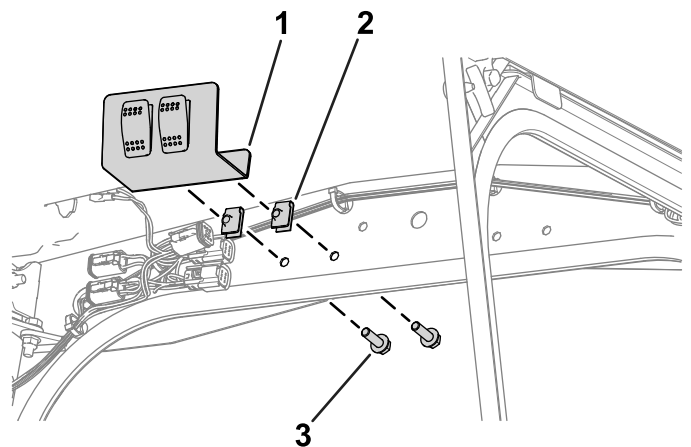

**Figure 4**

g558711

1. Switch bracket
2. Clip nut
3. Bolt (5/16 x 1 inch)

4. Plug the switches into the kit wire harness (see callout 2 in [Figure 2](#)).
5. Plug the kit wire harness into the vehicle wire harness (see callout 2 in [Figure 3](#)).
6. Fold the cab down to ensure that the wire harness does not bind or pinch.

**Notes:**

**BOSS**  
S N O W P L O W