

Curb Guard Kit

- Part No. BAL00898
- Part No. BAR00498
- Part No. STB00313
- Part No. STB00315
- Part No. STB03394
- Part No. STB03395
- Part No. STB04363
- Part No. STB04364
- Part No. STB05065
- Part No. STB05066
- Part No. STB08095
- Part No. STB08096

Installation Instructions

⚠ WARNING

CALIFORNIA

Proposition 65 Warning

Use of this product may cause exposure to chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

1. Park the machine on a level surface, and raise the plow a few centimeters (inches) off the ground.
2. Place a jack stand under the plow pushframe, shut off the vehicle engine, engage the parking brake, and remove the key.
3. Remove the 2 outermost bolts, 2 washers, and 2 nuts securing the blade to the plow and discard them (Figure 1).

Safety

Installing this kit will change the weight of your plow. Ensure that your vehicle does not exceed the gross-vehicle-weight rating (GVWR) at any time. You may need to weigh the vehicle and add ballast or limit the payload of the vehicle to compensate.

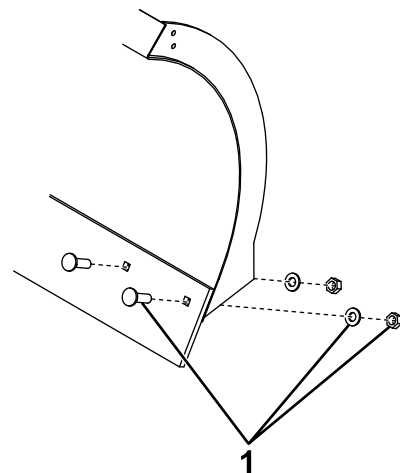


Figure 1

g212346

1. Discard these fasteners.

4. Use the table below to determine which holes in the curb guard (Figure 2) to mount the guard through.



Plow	Blade	Holes to Use
Power-V XT and Flat-Top plow blades Note: This kit will not fit DXT plow blades.	7 ft 6 inches Power-V	A and C
	8 ft 2 inches Power-V	A and D
	8 ft 2 inches Power-V poly	A and D
	9 ft 2 inches Power-V	A and B
	9 ft 2 inches Power-V poly	A and B
	10 ft Power-V	A and C
Straight-blade plow blades	7 ft 6 inches Standard-duty	B and F
	7 ft 6 inches Super-duty	B and F
	7 ft 6 inches poly	B and F
	8 ft Super-duty	A and C
	8 ft poly	A and C
	8 ft 6 inches Super-duty	B and D
	9 ft Super-duty	B and E
Trip-edge plow blades	7 ft 6 inches Standard-duty	B and F
	7 ft 6 inches Super-duty	B and F
	8 ft Super-duty	A and C
	9 ft Super-duty	B and E
Super-duty XT plow blades	8 ft Super-duty XT	A and C
	8 ft 6 inches Super-duty XT	B and D
	9 ft Super-duty XT	B and E
Heavy-duty plow blades	9 ft Heavy-duty	A and C
	10 ft Heavy-duty	A and B
HD+	9 ft HD+	A and B
	10 ft HD+	A and B

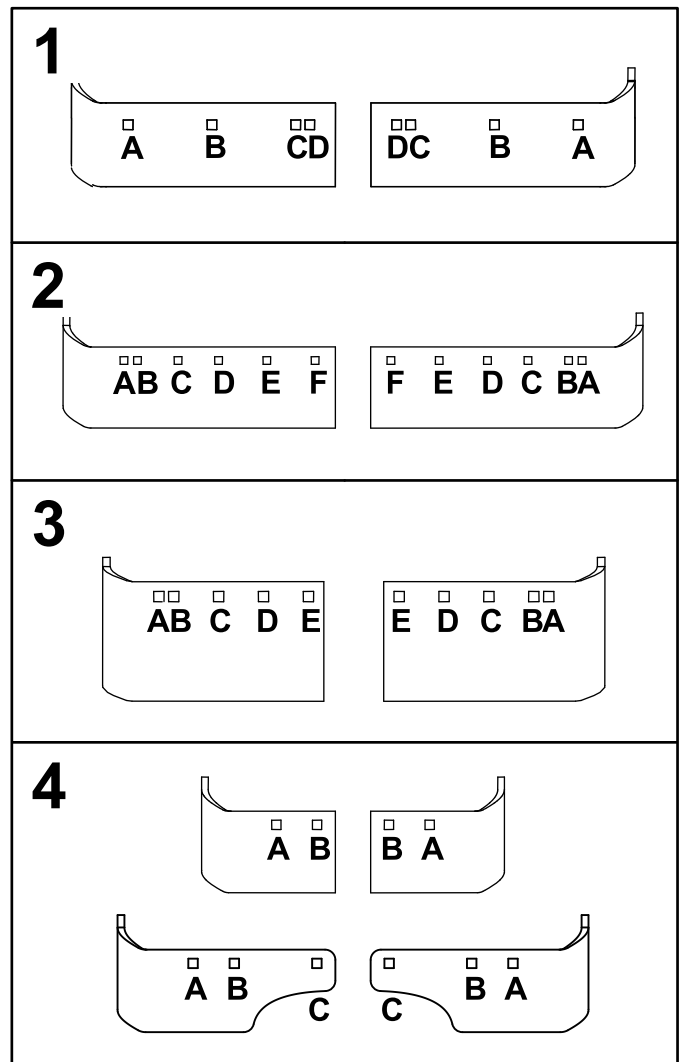


Figure 2

1. Power-V
2. Straight-blade/Trip-edge
3. Super-duty XT
4. Heavy-duty/HD+

5. Mount the curb guard to the blade using 2 bolts, 2 washers, and 2 locknuts (Figure 3).

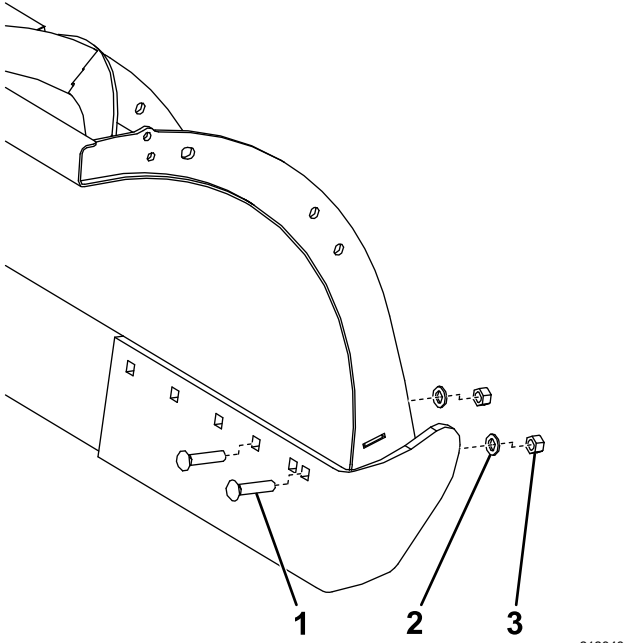


Figure 3

g212348

- 1. Bolt
- 2. Washer
- 3. Locknut

BOSS
S N O W P L O W