SmartHitch2TM Installation Procedure

Note: This installation procedure is used for installing the SmartHitch2 $^{\text{TM}}$ option.

1. Remove Hydraulic Cover (14) to expose Hydraulic Valve Manifold (30).

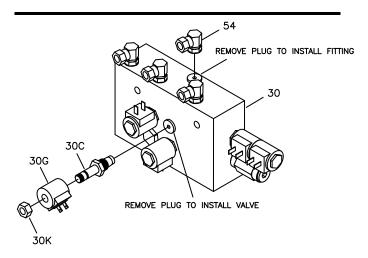


Figure 11. SmartHitch2TM Valve Installation

G10130

- 2. Remove the plug from the face of Hydraulic Valve Manifold (30).
- 3. Install **HYD07047** SmartHitch2[™] Attachment Valve (30C).
- 4. Place **HYD01638** Valve Coil (30G) on the stem of the Valve (30C).
- 5. Connect extra brown Ground Strap to **HYD01638** Valve Coil (30G).

Notice: DO NOT OVER-TIGHTEN coil nut. The valve will be damaged if the coil nut is over-tightened.

6. Install **HYD07060** Coil Nut (30K) onto the Valve (30C). Tighten 1/8 turn past finger tight.

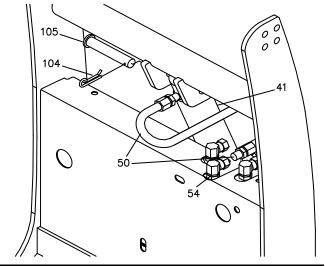


Figure 12. Installing SmartHitch2TM Hose

G10120

- 7. Remove the plug from the top of Hydraulic Valve Manifold (30).
- 8. Install 90° O-Ring Swivel Fitting (54) into the Hydraulic Valve Manifold (30). The fitting should be positioned so the open end of the fitting is facing towards the lift cylinder.
- 9. Remove the breather vent from the top of the hydraulic lift cylinder.
- 10. Connect one end of ¼ x 15 ½" Hose (50) to the back of the Lift Cylinder (41).
- 11. Connect the opposite end of Hose (50) to the 90° Swivel Fitting (54) located in the manifold.
- 12. Insert the SmartHitch2[™] Toggle Switch through the side hole of the coupler.
- 13. Tighten the switch with the jam nut provided.
- 14. Secure the Switch Boot onto the end of the switch.

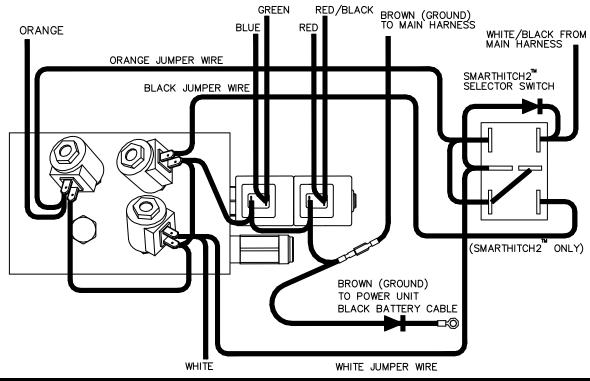


Figure 13. SmartHitch2[™] Wiring Diagram

G10447

- 15. Connect **MSC04672** Orange SmartHitch2[™] Wiring Harness to the switch and manifold as shown above.
- Connect MSC09867 White and MSC09866 Black SmartHitch2TM Wiring Harnesses to the switch and manifold as shown above.
- 17. Connect the White/Black Wire from the main wiring harness to the switch as shown above.