

### Installation Instructions

BOSS Products limited consumer warranty and BOSS Products commercial warranty policies are located at [www.BOSSPlow.com](http://www.BOSSPlow.com).


Patent [www.ttcopats.com](http://www.ttcopats.com).

## Safety

### Safety and Instructional Decals




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.

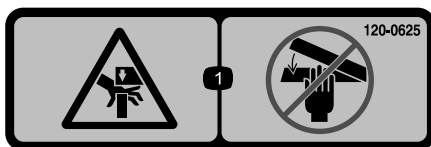

decal120-0625

120-0625


1. Pinch point, hand—keep hands away.

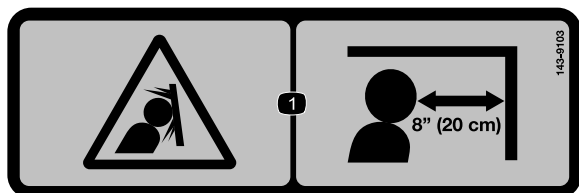

decal143-9103

143-9103


1. Head injury hazard—keep your head at least 20 cm (8 inches) away from the enclosure during operation.

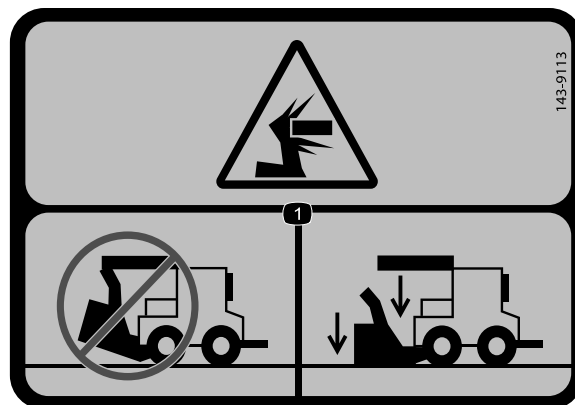

decal143-9113

143-9113

1. Collision hazard—do not raise the snowthrower when the cab is folded down; keep the snowthrower lowered when the cab is folded down.

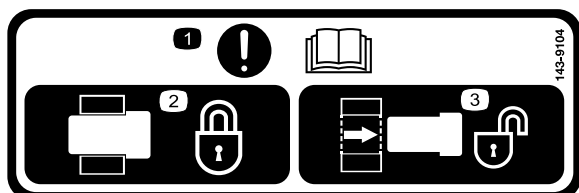

decal143-9104

143-9104

1. Attention—read the *Operator's Manual*.
2. Ensure that the coupler pins are locked in place when using an attachment.
3. Unlock the coupler pins to remove an attachment.



# Preparing the Machine

1. Park the machine on a level surface.
2. Lower the attachment.
3. Move the motion-control levers to the NEUTRAL position.
4. Wait for all moving parts to stop.
5. Engage the parking brake.
6. Remove the key.
7. Allow machine components to cool.

## Installing the Enclosure

Determine the left and right sides of the vehicle from the normal operating position.

1. On each side of the machine, remove and retain the 2 screws (5/16 x 1 inch) securing the side cover to the upper frame.

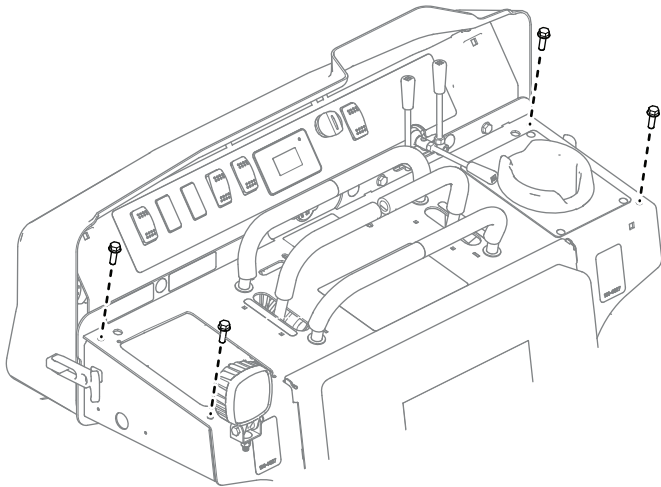


Figure 1

g524918

2. Loosen the 2 carriage screws shown below.

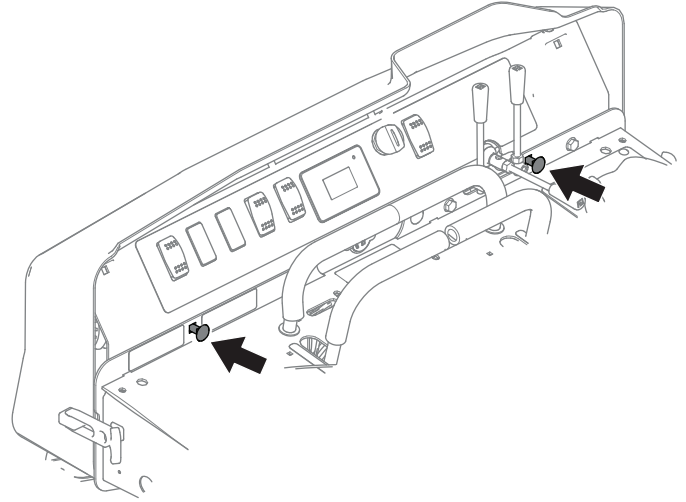


Figure 2

g524919

3. Install the enclosure to the machine.

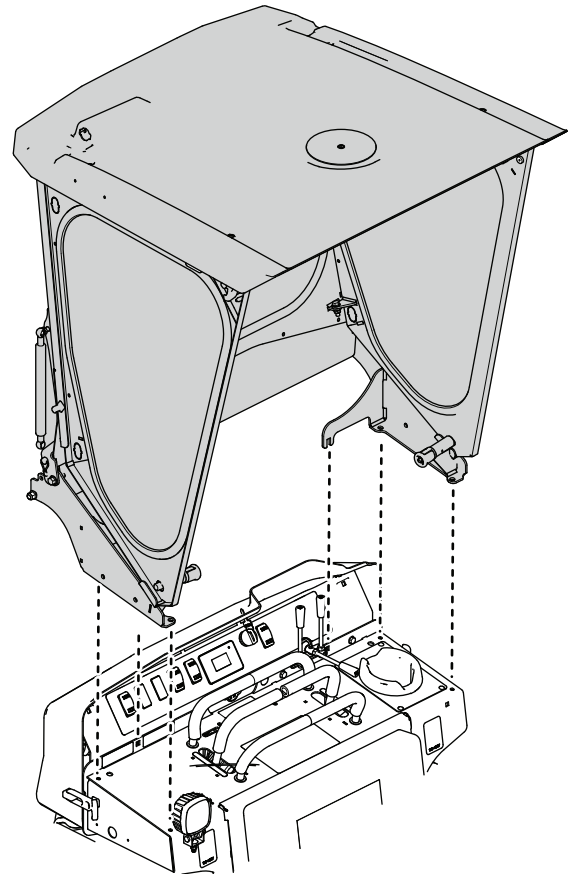


Figure 3

g524921

4. Tighten the 2 carriage screws shown below.

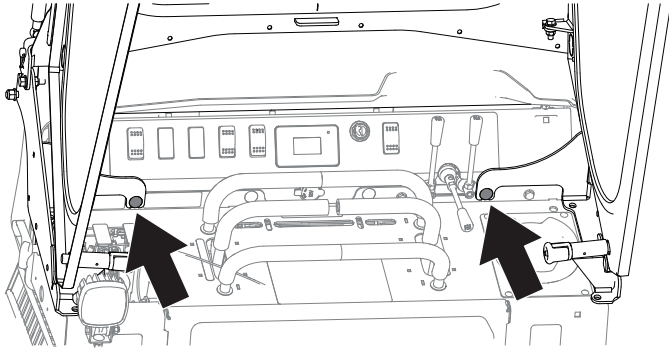


Figure 4

g524923

5. Install the 4 previously removed screws (5/16 x 1 inch) to secure the enclosure to the machine.

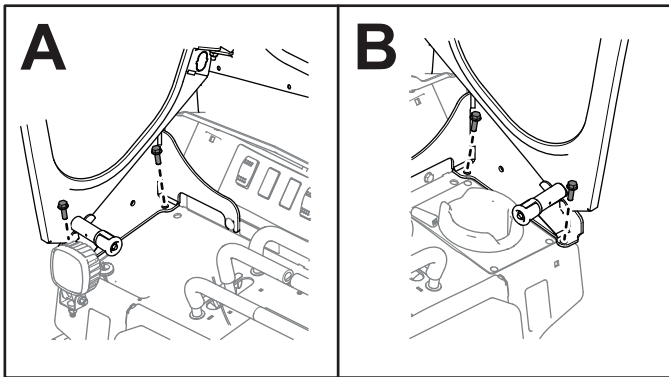


Figure 5

g524926

# Operation

## Folding the Enclosure

**Note:** Fold the enclosure every time the machine is traveling to areas with low ceilings or being stored on a trailer.

1. Remove the lock pins from the left and right sides of the enclosure.

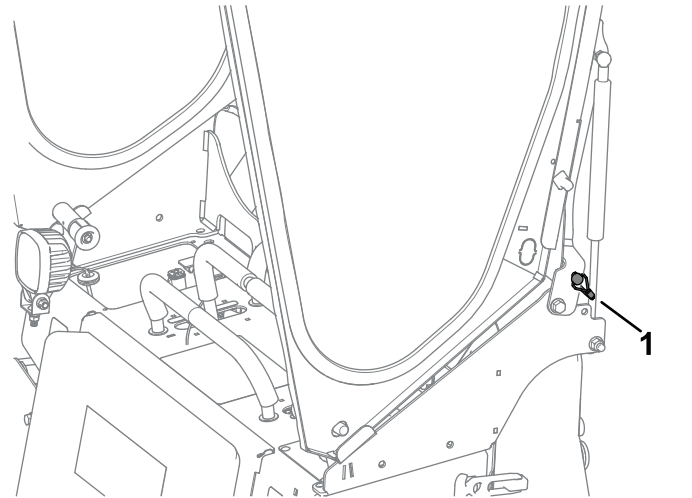


Figure 6

g524988

1. Pin location

2. Pull the knob on the left side panel and then on the right side panel.


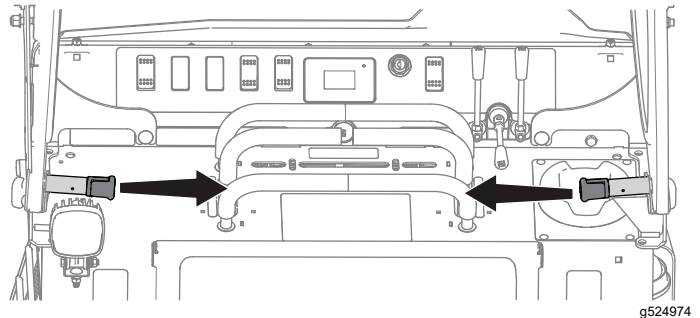


Figure 7

g524974


3. Tip the enclosure towards the front of the machine.

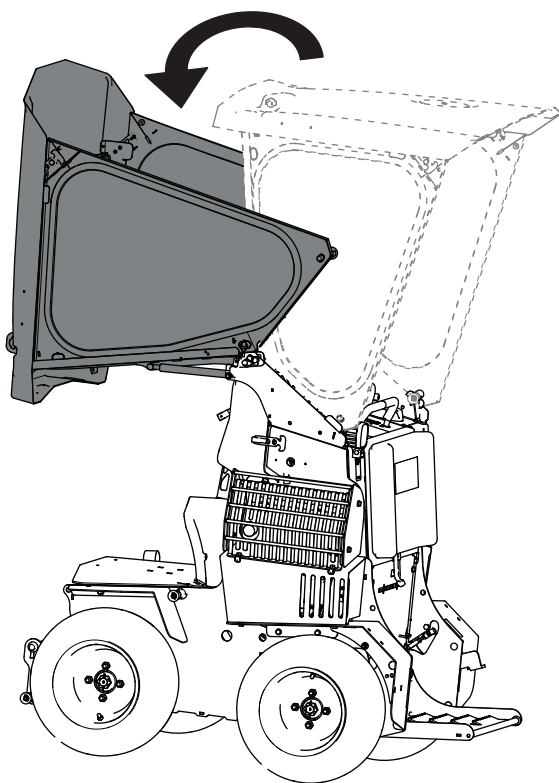

**Figure 8**


g524975

4. Release the latch located on the outer left corner of the enclosure and fold the side panel inwards. Repeat on the right side of the enclosure.

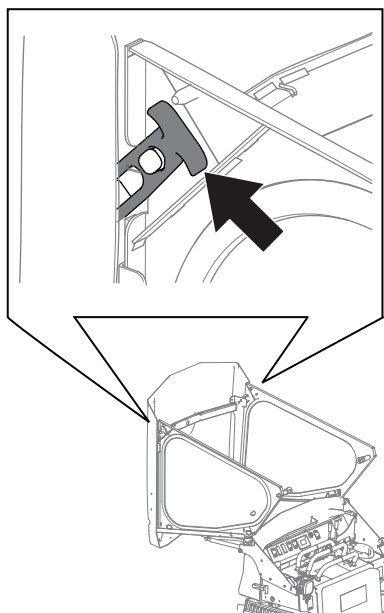

**Figure 9**


g524973

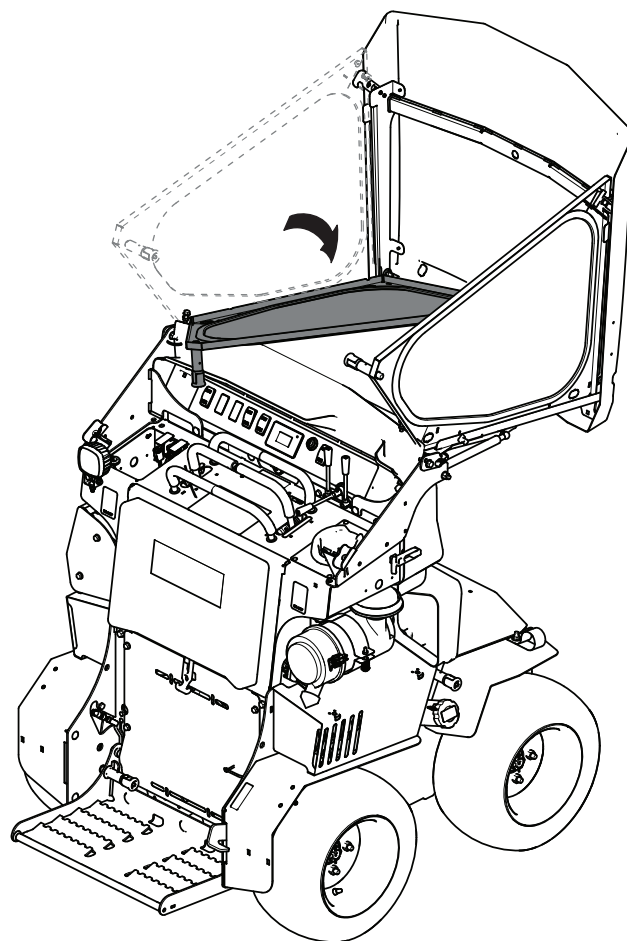

**Figure 10**

g525292

5. Fold the top of the enclosure downwards.
6. Secure the top of the enclosure to the frame by hooking the latches onto the lower catches.

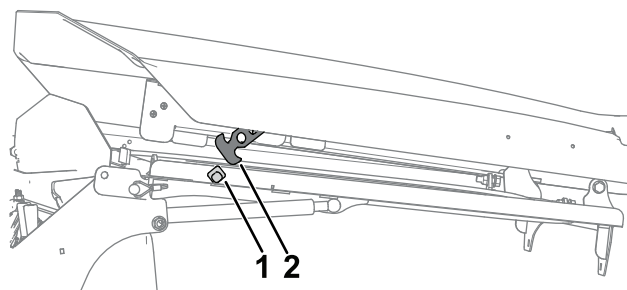


**Figure 11**

g525048

1. Latch location
2. Catch location

7. Install the lock pins into the left and right sides of the enclosure.

8. **Optional:** If you need to raise the snowthrower while the enclosure is lowered, a partial lowering position can be achieved by installing the lock pins in the holding position and lowering the enclosure so the lock pins rest on the dentents on the mount bracket.

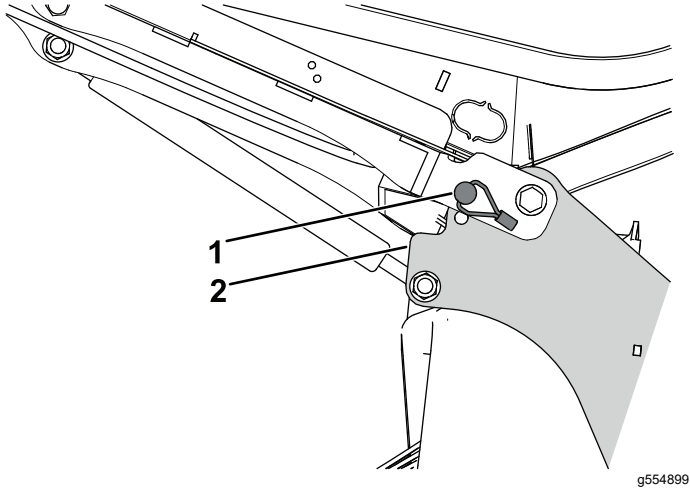

**Figure 12**

1. Lock pin in the holding position      2. Mount bracket
-

**Notes:**

**Notes:**

**BOSS**  
S N O W P L O W